



## CONTACT US

### HEAD OFFICE:

230 15th Avenue, Riviera, Pretoria  
Tel: +27 12 356 9500

### STORES:

Centurion Megastore: +27 12 653 9600, Montana Megastore: +27 12 523 0400,  
Randburg: +27 11 699 7560, Riviera: +27 12 356 9500, Silver Lakes Megastore: +27 12 809 9900,  
Waltloo: +27 12 803 5158, Waterkloof Glen: +27 12 998 5074

[www.chamberlain.co.za](http://www.chamberlain.co.za)




**FAMOUS FOR HARDWARE** since 1903

\* Please note: Information in this brochure is FH Chamberlain's opinion and we do not warrant the accuracy or completeness of that information.  
FH Chamberlain excludes all liability in relation to the statements in this booklet.



# HOW TO

## Mount a mirror

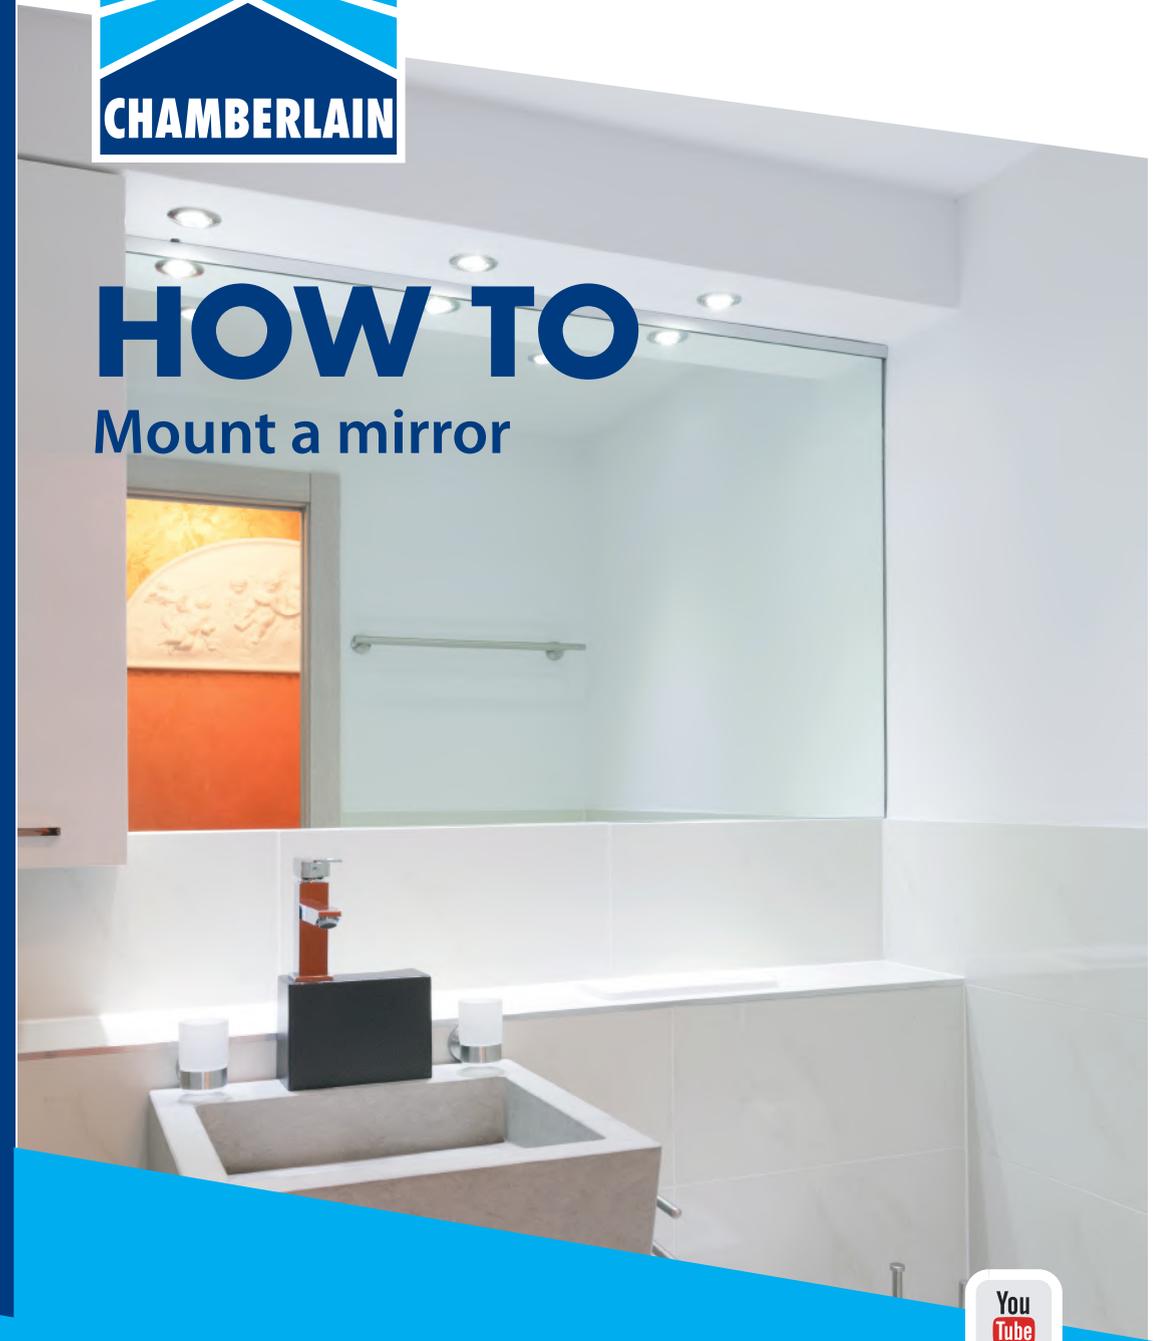

**FAMOUS FOR HARDWARE** since 1903



No mirror, mirror on the wall? Oom Thys will show you how to mount one on a tiled wall. Whilst care is needed when drilling through glass and tiles, with Oom Thys's help and the proper tools, you'll have your mirror successfully mounted in minutes.

## INSTALLATION GUIDE



1 Cut a plywood board to match the measurements of your mirror. Drill a hole through a corner of the board using the same size drill bit for the wall. This hole will act as a guide.



2 Place the wooden template on top of your mirror. Make sure all sides are perfectly aligned.



3 Secure a diamond core drill bit to your drill. Align the holes and start to drill carefully. Don't exceed 500rpm.



4 Next, place your mirror against the wall and carefully mark each hole with a pencil. You'll need someone to hold the mirror steady.

### What you will need:

- Detector
- Level
- Diamond core drill bit
- Masonry drill bit
- Drill
- Screwdriver
- Mirror screws
- Plank of wood
- Wall plugs
- Pencil
- Chrome mirror caps

### Chamberlains DIY tip!


Spray a little water where you're going to drill. Doing so will stop glass shards flying from the mirror.



5 Replace your diamond core drill bit with a masonry one. Be sure to turn off the hammer action. Start drilling slowly.



6 Insert all four wall plugs into the holes in the wall. Make sure they fit. Insert the nylon plugs into the mirror. These will fasten to your wall plugs. Using all the wall screws, secure your mirror to the wall. To finish the job, attach chrome caps to the end of each screw. That's it!

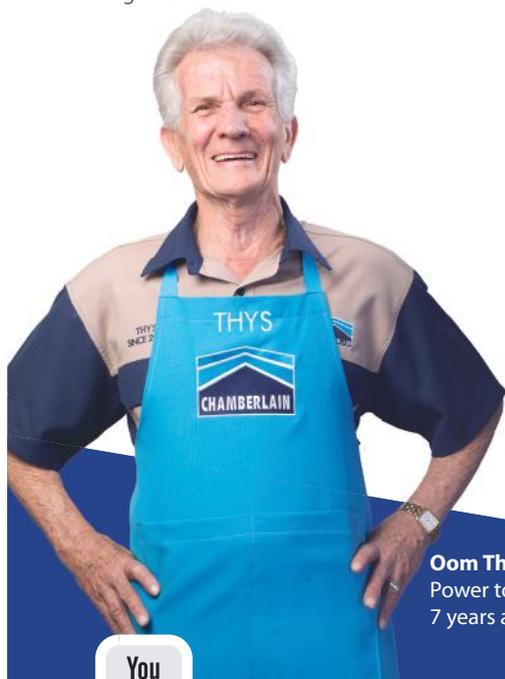

**Oom Thys Venter**  
Power tools expert, Montana  
7 years at Chamberlains



Watch Oom Thys show you how to on YouTube.



FAMOUS FOR HARDWARE since 1903

